


## Addendum to the Instruction Manual: Attaching the 1/4"-20 Adapter to the EQ-2 Mount



**Figure 1.**

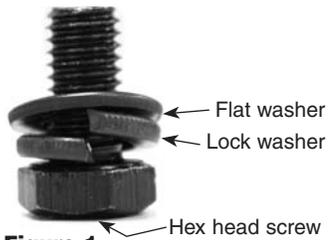


**Figure 2.**

To attach the 1/4"-20 adapter to the EQ-2 mount follow these steps:

1. Place a lock washer and a color black flat washer onto one of the hex head screws (Figure 1).

2. Now, push the screw up through one of the holes in the top of the mount, and add three of the flat washers to the exposed screw end (Figure 2).

3. Thread the end of the screw into one of the threaded holes in the bottom of the 1/4"-20 adapter (Figure 3).

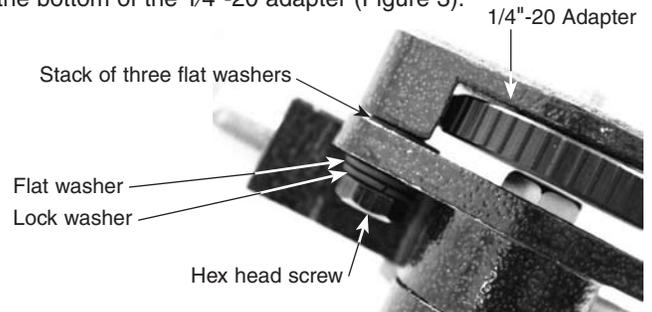

**Figure 3.**

4. Repeat steps 1 through 3 for the other hex head screw.

5. Tighten both screws firmly.